



INSTALLING THE REDLINEGOODS SHIFT BOOT FOR 4WD NISSAN PATHFINDER 1996-04

1. REMOVE SHIFT KNOB AND TRANSFER CASE SHIFT KNOB

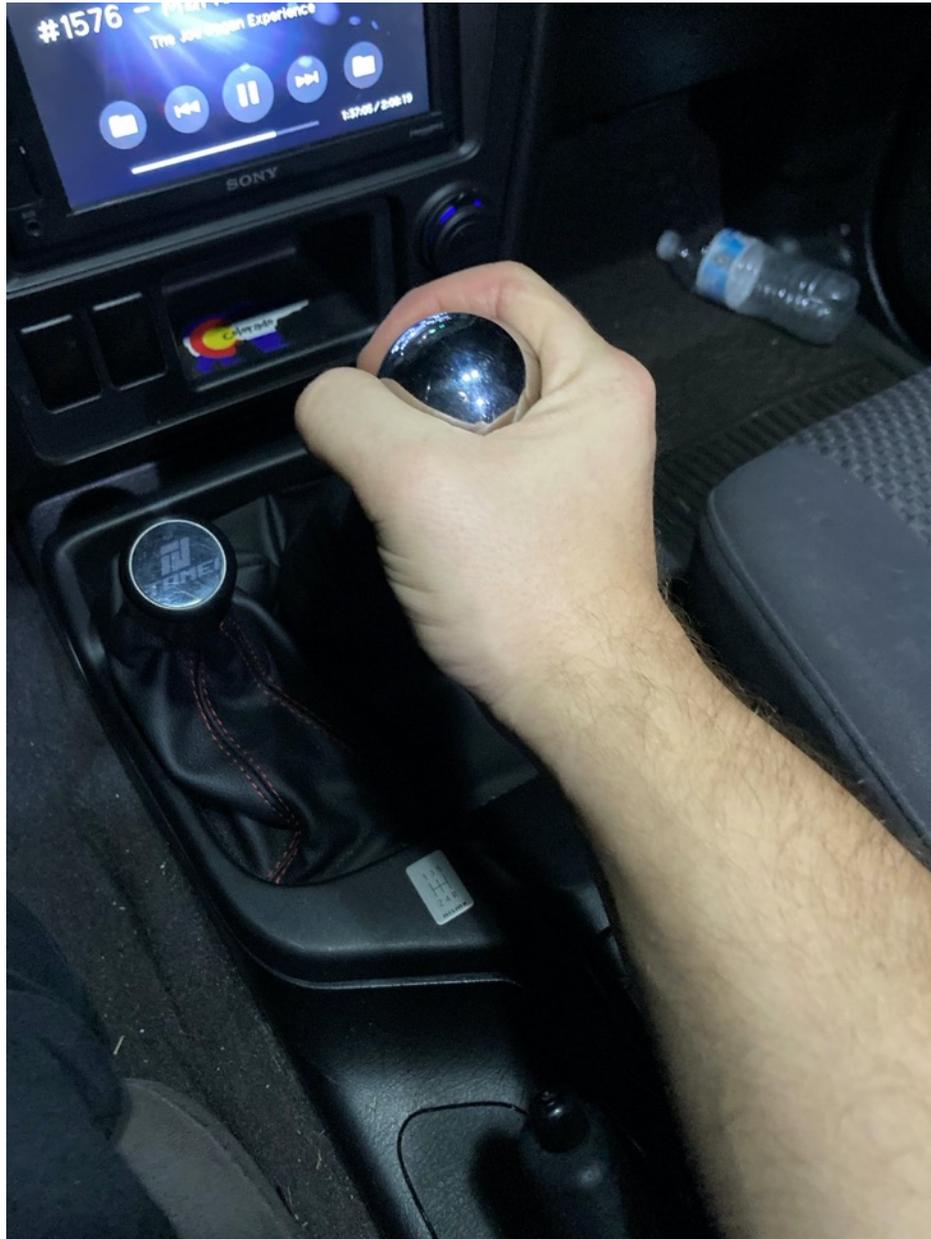

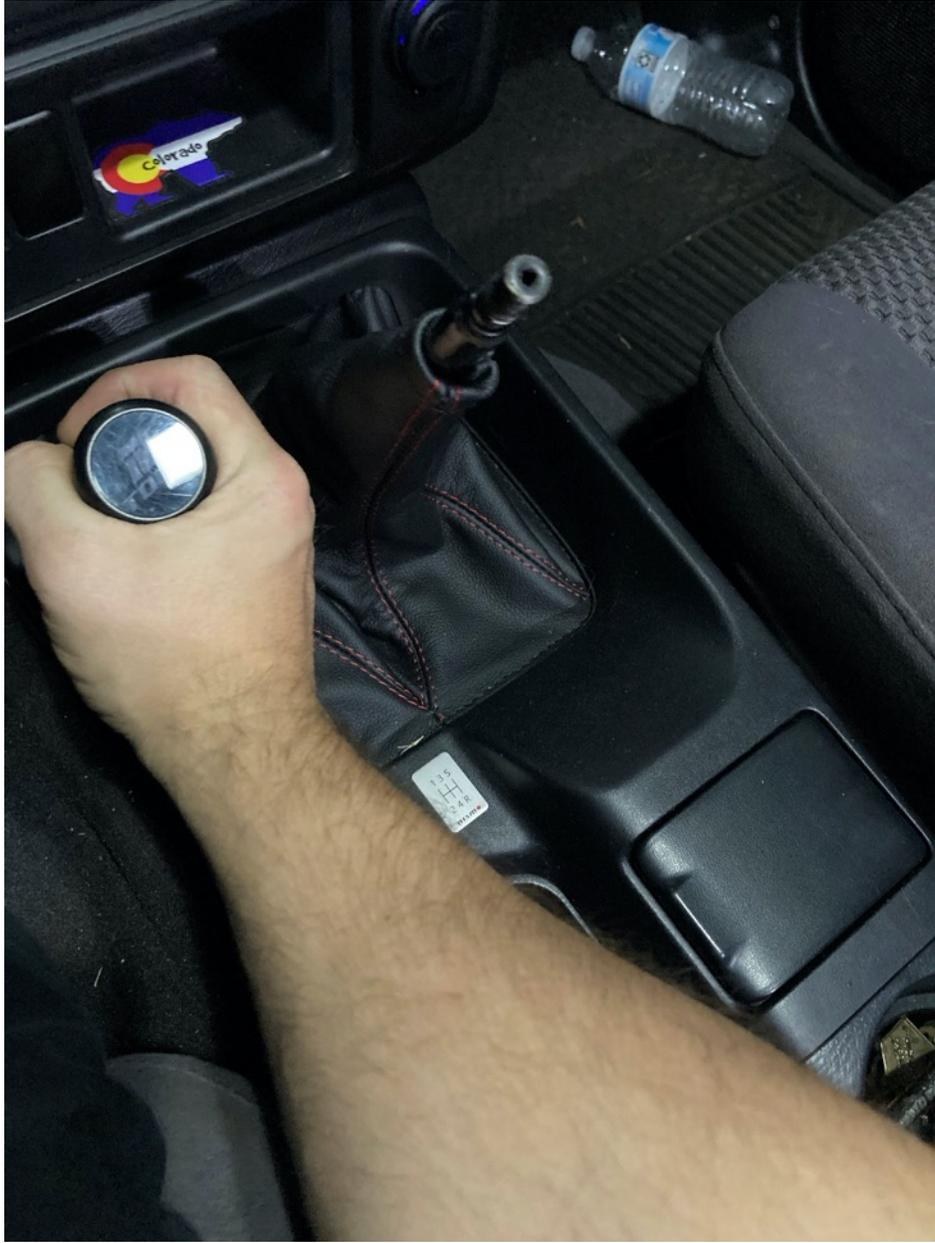



2. REMOVE ASH TRAY. SIMPLY OPEN THE LID AND PULL UP ON IT. IT SHOULD JUST POP RIGHT OUT OF THERE (IT'S NOT HELD IN BY MUCH).




- 3. YOU CAN NOW REACH IN, GRAB, AND PULL UP ON THE SHIFT BOOT BEZEL. IT SHOULDN'T TAKE MUCH FORCE TO POP IT OUT FROM THE CENTER CONSOLE BEZEL.**





- 4. BEFORE YOU PULL THE SHIFTER BEZEL COMPLETELY UP, YOU WILL HAVE TO DISCONNECT THE WHITE ELECTRICAL CONNECTOR FOR THE ASHTRAY LIGHT. WHILE HOLDING BOTH SIDES OF THE CONNECTOR, PUSH DOWN ON THE TAB CIRCLED IN THE PICTURE AND PULL APART.**

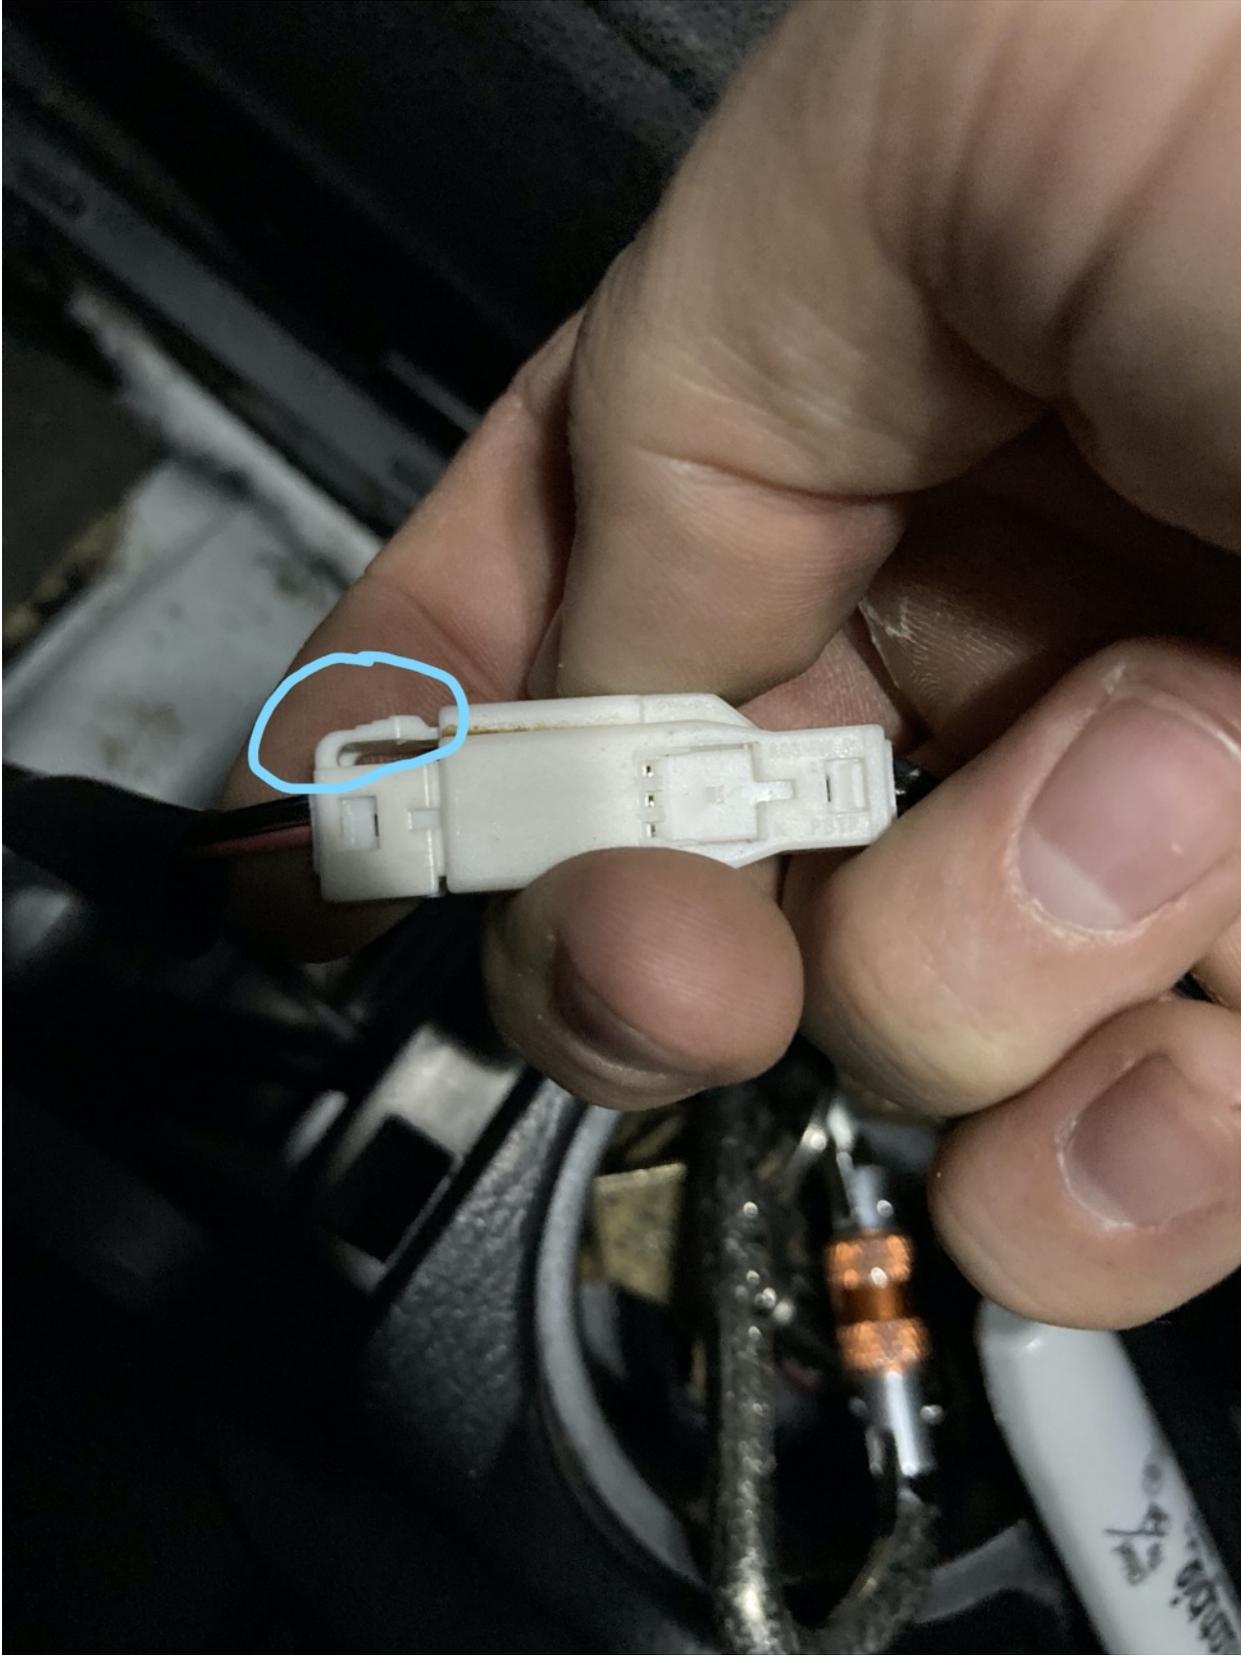



5. NOW YOU CAN REMOVE THE SHIFTER BEZEL. TURN THE SHIFTER BEZEL OVER AND YOU CAN SEE THE TABS THAT HOLD THE SHIFT BOOT IN PLACE.



6. YOUR OLD SHIFT BOOT WILL BE SECURED ONTO A FEW OF THE NIPPLES PICTURED BELOW WITH SOME PUSH ON WASHERS HOLDING IT IN PLACE. GRAB A PAIR OF NEEDLE NOSE PLIERS AND CAREFULLY PULL THE WASHERS OFF. YOU WON'T HAVE TO REUSE THEM WITH THE NEW BOOT.




7. NOW POP YOUR OLD BOOT OUT FROM THE TABS, DISCARD IT AND INSTALL YOUR NEW, BEAUTIFUL, LEATHER SHIFT BOOT IN REVERSE ORDER OF THE STEPS ABOVE. THE NEW BOOT WILL JUST SNUGLY SNAP UNDER THE HOOK TABS ABOVE LIKE SO:





8. THE SHIFT BOOT CONSOLE JUST POPS BACK IN TO PLACE, PUSHING ON EACH OF THE CORNERS CAREFULLY.

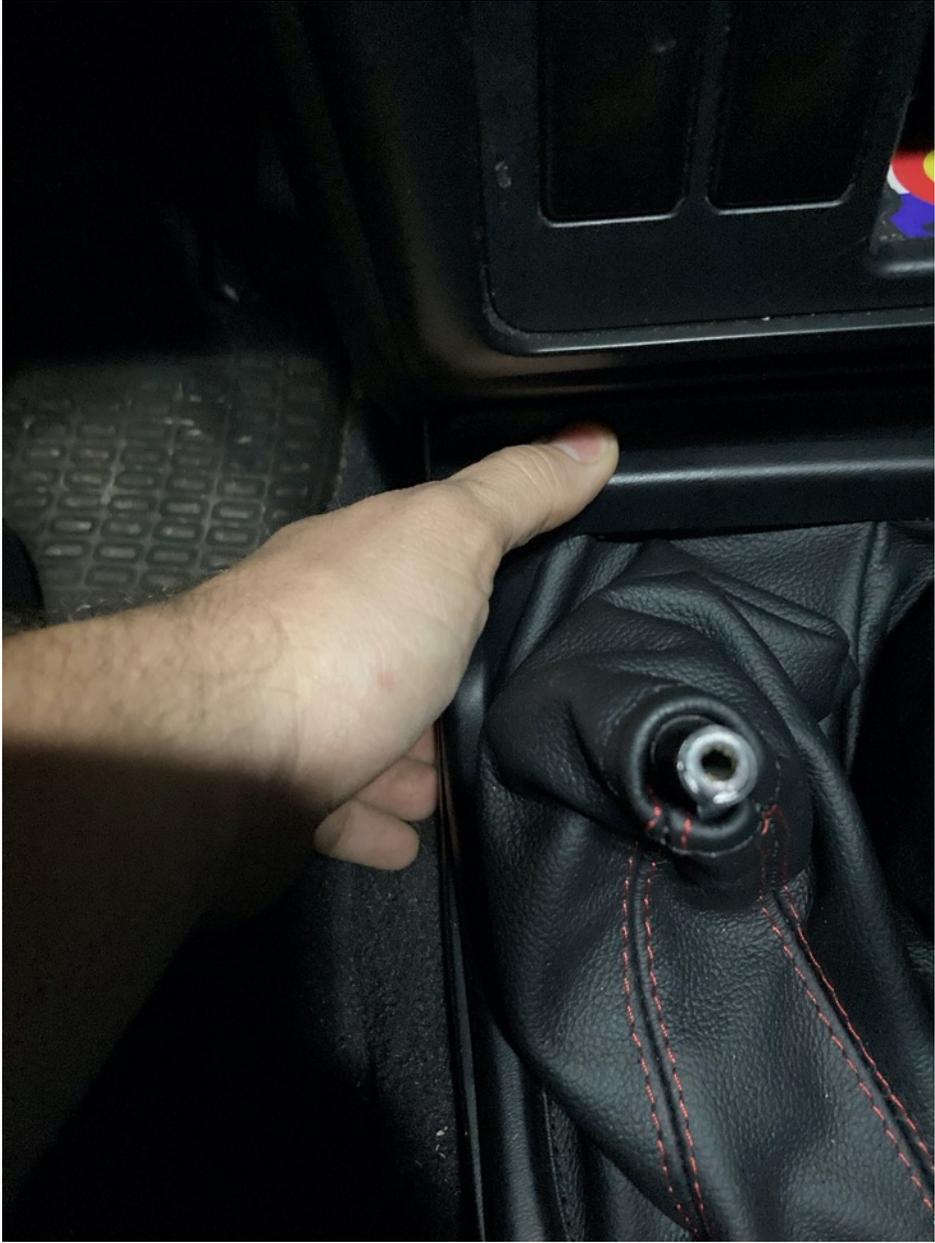



9. VIOLA! THE FINISHED PRODUCT:

